



BY PRO-JECT AUDIO SYSTEMS

# INSTRUCTIONS FOR USE

## Pro-Ject Pre Box S

Dear music lover,

thank you for purchasing a PRO-JECT AUDIO preamplifier.

In order to achieve maximum performance and reliability you should study these instructions for use carefully.



*Warning of a hazard for the user, the unit or possible misuse.*



*Important notice.*

## Safety instructions

 
AC outlet voltages vary from country to country. Before connecting to the mains, make sure that the voltage in your area meets the voltage requirements printed on the power supply.



The power supply is used to disconnect the unit from the mains. Make sure that the power supply is easily accessible at all times. Never handle the device, the power supply while your hands are wet or damp.

Avoid letting liquids enter the device or the power supply. Never place any item containing liquid, such as a flower vase on or near the device. Never spill any liquid on the device or the power supply. Never place any naked flame sources, such as lighted candles on or near the device. The product shall not be used in damp or wet locations, next to a bathtub, sink, swimming pool or any other similar conditions.

## Connectors

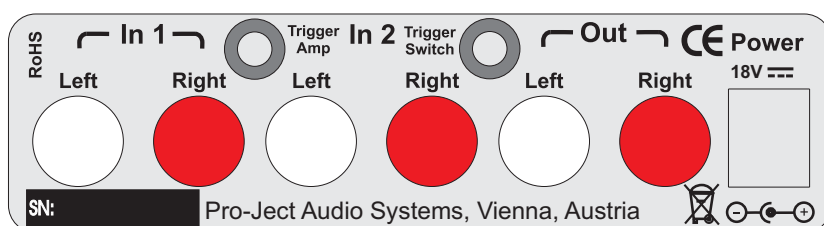

Make all connections whilst the preamplifier is disconnected from the power supply.



Take care to connect the left and right channels correctly. The right channel is usually marked red, the left channel black or white.

Never use any other power supply than the one supplied with the unit.

## Pre out

A power amplifier or active loudspeakers can be connected to the output sockets marked **Out**.

## Inputs

Line level sources such as CD player radio or TV can be connected to the input sockets marked **In 1** or **In 2**.

## Remote power-on, switching voltage

The socket marked **Trigger Amp** provides a 12V DC switched output voltage for remote power-on of units with this facility (such as the Pro-Ject Amp Box S or Pro-Ject Amp Box S Mono), which corresponds to the position (on/off) of the power switch on the front panel.

 
**Optional Pro-Ject Switch Box S.** The **Trigger Switch** socket connects the input expander Pro-Ject Switch Box S. The Switch Box S provides three extra line-level inputs.

A 45cm remote power-on cable (polarity  $--\bullet--+$ ) is supplied with the Pro-Ject amplifiers for connecting the remote-switched power socket to the Pro-Ject Pre Box S. Longer cables are available from your Pro-Ject dealer. Do not use this trigger output for any other connections for which it is not designed.

## Mains power connection

Connect the low voltage plug from the power supply to the **Power 18V** socket before connecting the power supply to the mains.

## Remote control

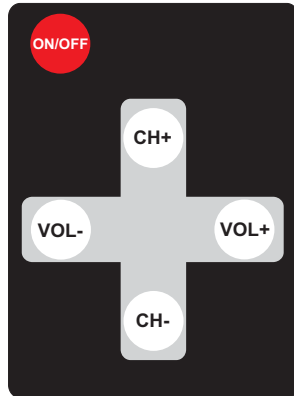

turns the unit on or back into standby



and



adjust the sound volume




and



select the inputs

## Front panel controls

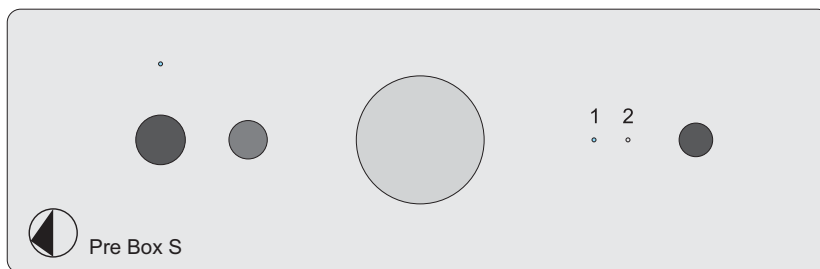 

## To switch on from standby or to standby

The push button on the front panel turns the unit on or back into standby (press and hold to switch into standby mode). The blue LED above the stand-by push button shows that the unit is switched on.

## Input selector

After the unit is powered on, pressing the grey button next to the two LEDs selects the inputs in turns. The selected input will be shown by the corresponding LED.

If the optional input expander Pro-Ject Switch Box S is connected, the input selector will also select the additional inputs provided by the Switch Box S. For further details please see the user guide of the Pro-Ject Switch Box S.

## Volume

Adjust the volume to the desired level, using the large knob on the front panel.

## Replacing batteries

Proceed as follows:

- Unlock and slide open the battery case cover
- Replace the battery.  
Make sure the battery is the right way round !
- Close the battery case cover



Battery type: 1 x CR2032 / 3V or 1 x CR2025 / 3V



*Do not dispose the batteries as ordinary domestic refuse. Please dispose your exhausted batteries at the appropriate collection sites - usually located at supermarkets and drugstores.*

## Technical specifications Pro-Ject Pre Box S

Frequency response:	20Hz - 20kHz ( $\pm 0,2$ dB)
Noise floor:	-100dB (A weighted)
THD:	0,001%
Gain:	8,5dB
Pre out:	1 pair RCA/phono sockets
Output voltage typically:	1V at 1kHz
Line-level inputs:	2 pairs RCA/phono sockets
Input impedance:	20kohms
Trigger Amp:	12V DC switching voltage
Trigger Amp:	2-pole 2,5mm co-axial jack
Trigger Switch:	digital switching signal
Trigger Switch:	2-pole 2,5mm co-axial jack
Outboard power supply:	18V/500mA DC, suitable for your country's mains supply
Power consumption:	100mA AC, <1W in standby
Replacement battery remote control:	1 x CR2032 / 3V or 1 x CR2025 / 3V
Dimensions W x H x D (D with sockets):	103 x 36 x 104 (109)mm
Weight:	630g without power supply

## Service

Should you encounter a problem which you are not able to alleviate or identify, please contact your dealer for further advice. Only when the problem cannot be resolved there should the unit be sent to the responsible distributor in your country.

## Warranty



*The manufacturer accepts no responsibility for damage caused by not adhering to these instructions for use. Modification or change to any part of the product by unauthorized persons release the manufacturer from any liability over and above the lawful rights of the customer.*

## Copyright

PRO-JECT is a Registered Trademark of H. Lichtenegger.

This guide was produced by: Audio Trade GmbH  
Copyright © 2012. All rights reserved.

The information was correct at the time of going to press. The manufacturer reserves the right to make changes to the technical specification without prior notice as deemed necessary to uphold the ongoing process of technical development.